

# A / S Manual




**Lumimed LD series**

# 1. REMOVING THE FRONT PANEL

- Dismantle the power code if it is plug in.
- Pull out the knob as follow.





- Overturn the set and unscrew below marked "A".

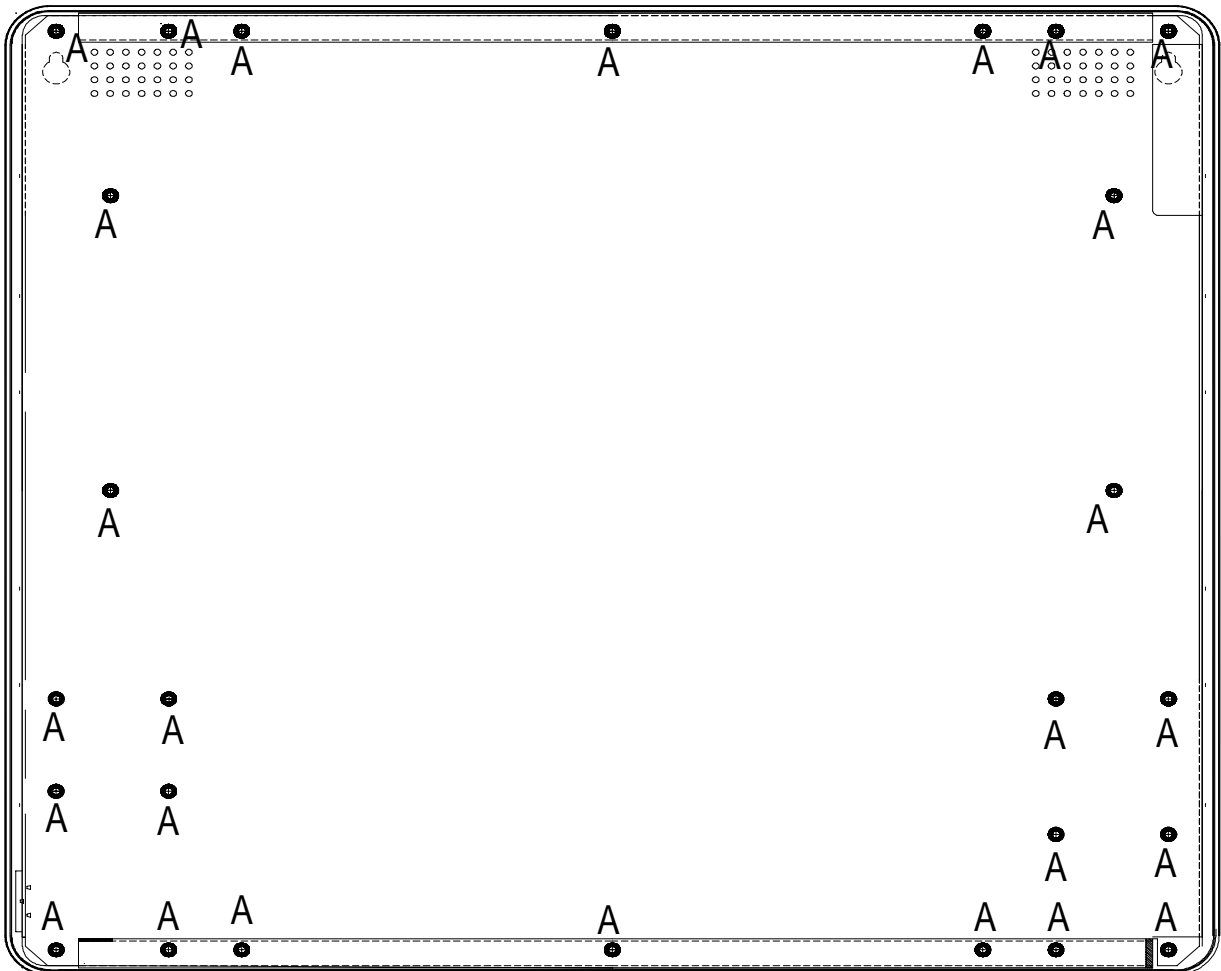


Mark	Standard	Q'ty
A	M3 X 8.0L	26

- After unscrew, re-overturn the set and dismantle the front panel as pictures.

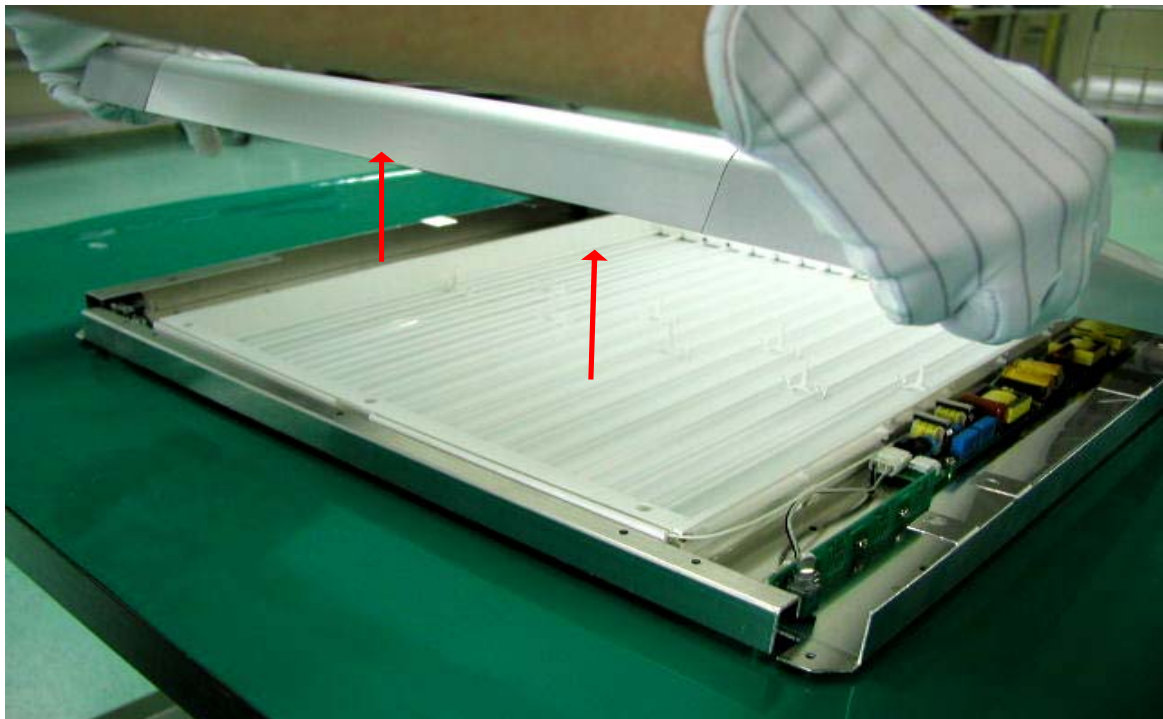
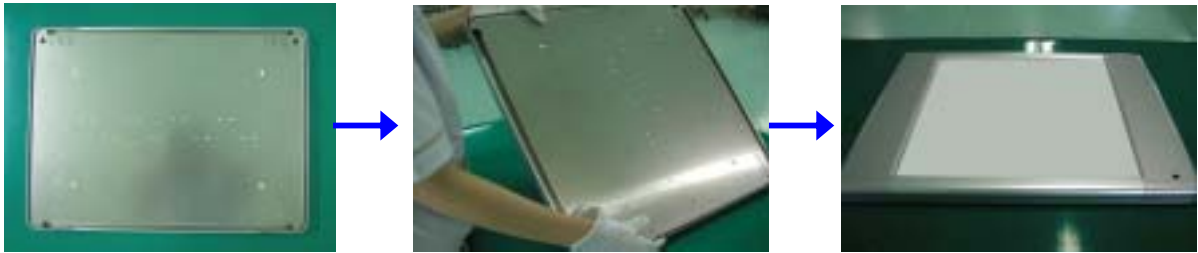


## 1-1. Inverter replacement


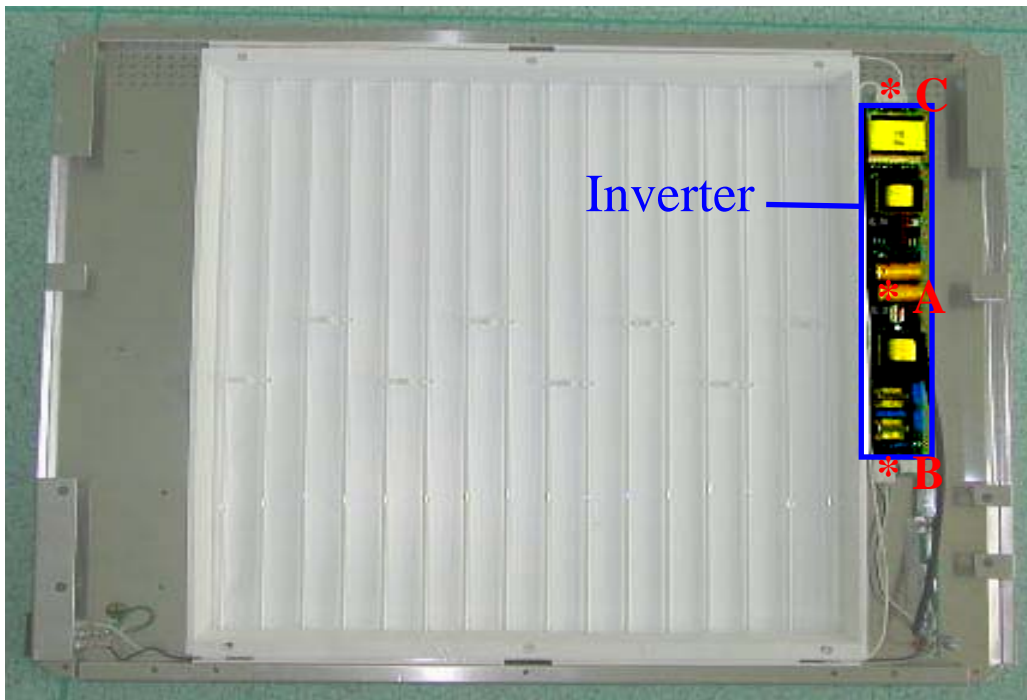


1-1-1. Push and dismantle the connectors above marked \*A, \*B, \*C.

\* A

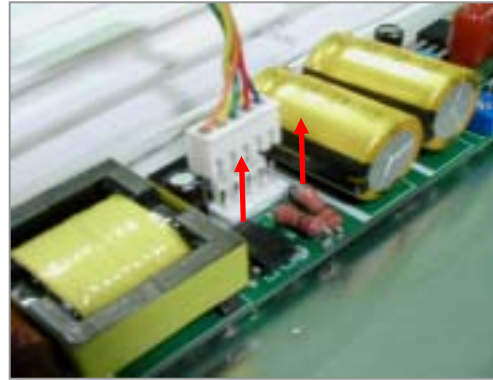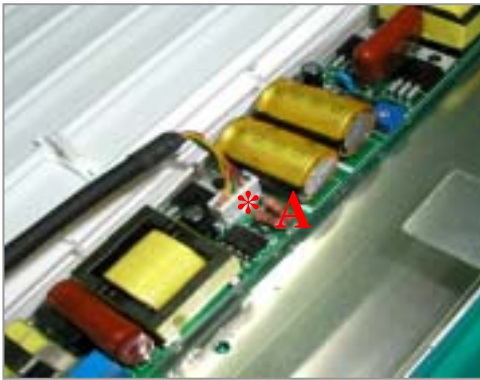


\* B

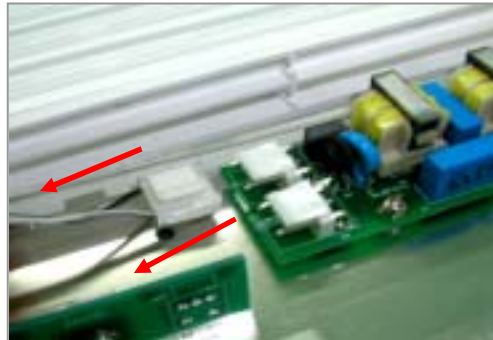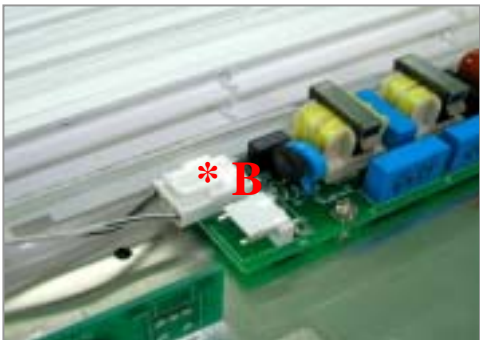

\* C



1-1-2. Unscrew marked in red-circles to replace with the new inverter.

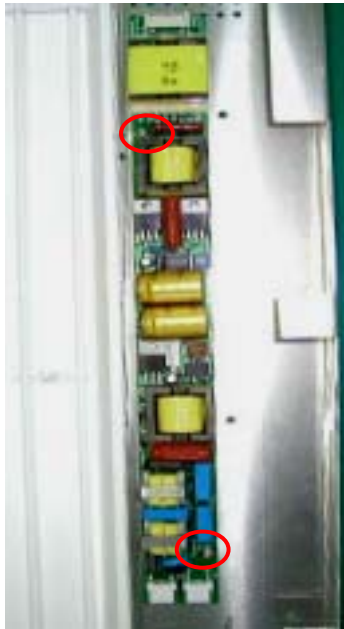


1-1-3. After replacing the inverter, assemble in reverse order.



## 1-2. Lamps replacement

1-2-1. Removing the front panel and dismantle the connectors as 1-1-1.

1-2-2. Unscrew from the 4 of below marked position.(M3X6 - 4EA)

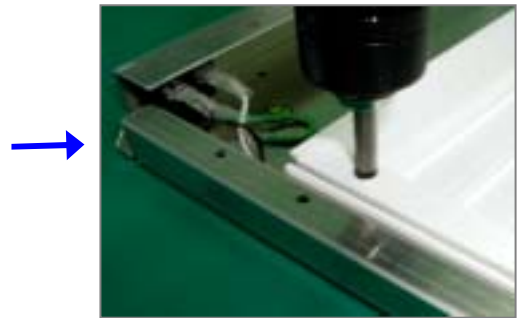

1-2-3. Draw out the lamps from the lamp support as below pictures.  
(Be Careful when pull out the lamps as it is fragile.)



1-2-4. Dismantle the <Module> as below pictures.




< Module >

1-2-5. Overturn the <Module>, and open the frame which fixed with tape.



< Back of the Module >

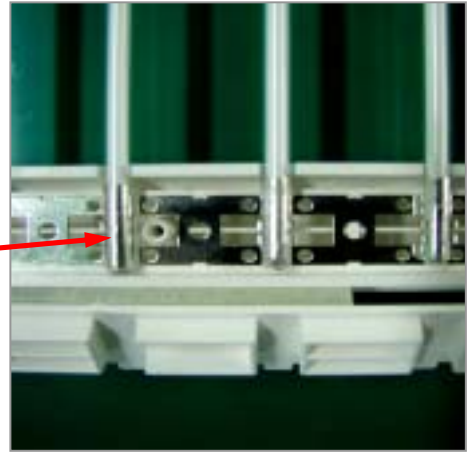

< Open the frame as pictures >

1-2-6. Replace the lamp and assemble in reverse order.

